



STEP 1 – PRIOR TO INSTALLATION

- A) Bushwacker only** approves installing the flares according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B) Fit:** Verify the fit of the flares to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting:** (Optional) if paint is desired it must be done prior to installing flares on vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for ABS plastic as per your paint system manufacturer's recommendations is required. Paint flares using a high quality enamel, or polyurethane automotive paint. If painting edge trim (not recommended), use a flex additive.
- D) Performance:** Using larger Tires may increase the area required to turn the vehicle. Some Tire/Rim combinations may require lowering bump stops and or installing steering stops to prevent tire from contacting flare.
- E) Exhaust System:** Modifications may be necessary to maintain a minimum 4" clearance between flares and exhaust pipes. (Exhaust gases should not vent directly onto flares)
- F) Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint **BEFORE** installing flares. Spray inner fender wells with undercoating **AFTER** flare attachments have been completed.
- G) Decals:** Flares may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of flares.

Ford Extend-A-Fender® Fender Flares Set of 4

Front Part #20928-02

Rev-3 9/12/2013

For complete fitment info visit : www.bushwacker.com

TOOLS FOR EASY INSTALLATION:

- #2 Phillips Driver
- Socket Wrench
- 7/32" Socket
- 10 mm Socket
- Grease Pencil
- 13 mm Wrench

LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.

Included in Hardware Kit:

- | | | | | | | | | | |
|----|---|----|---|----|---|----|---|----|--|
| 1. |  | 2. |  | 3. |  | 4. |  | 5. |  |
| | CL1-0005,
Dacromet "U"
Spring Clip,
8 pcs | | ET1-0002,
Edge Trim Tool,
1 pc | | GP1-0005,
Large Wiper Style
Edge Trim,
315 inches | | MT1-0002,
1" x1" x.017"
Black Tab,
8 pcs | | SW1-0050,
10 x 5/16 Phillips
Truss Screw,
8 pcs |


STEP 2 - EDGE TRIM INSTALLATION

A. Peel two to three inches of red vinyl backing away from Edge Trim (GP1-0005) tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle).


B. Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare.



Front Flare Installation Procedures (Driver's Side):

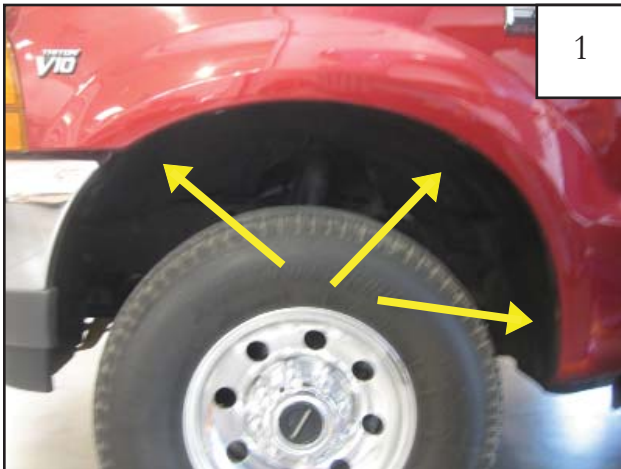

Remove three factory screws with a 7/32" socket wrench. Save screws for reinstallation.

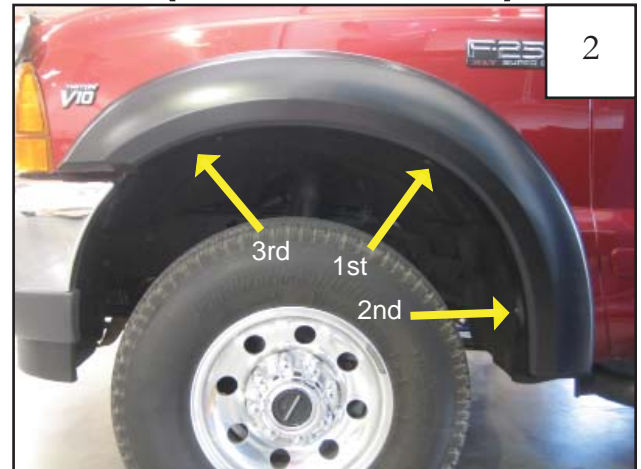

Position flare on fender and reinstall factory screws through holes in flare and fender with a 7/32" socket wrench in order shown. *NOTE: If given order is not used, part is more difficult to install.*




Completed front flare installation.

Rear Flare Installation Procedures (Driver's Side):



4

Remove one factory bolt with a 10 mm socket wrench, hold nut on bolt in place with a 13 mm wrench. Save bolt for reinstallation

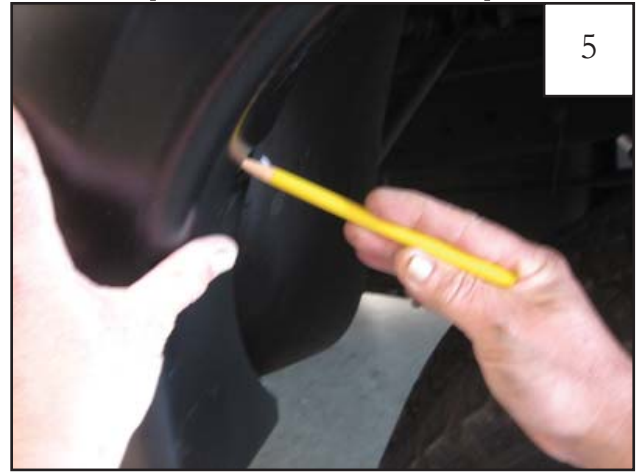


5

Hold flare to vehicle and mark four clip locations with a grease pencil. See Step 6 for locations.




6

Four clip locations.

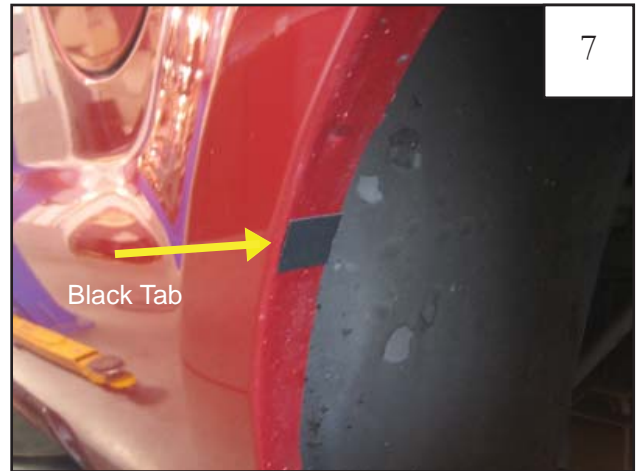


7

Install a black tab centered over each of the four marks made in Step 5.

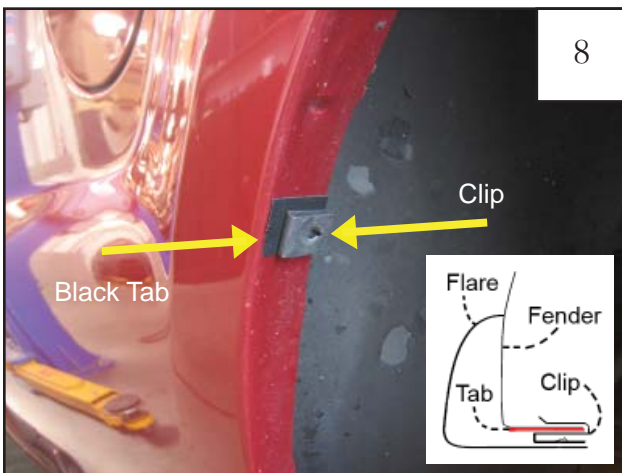

8

Install a clip over each of the black tabs installed in Step 7.

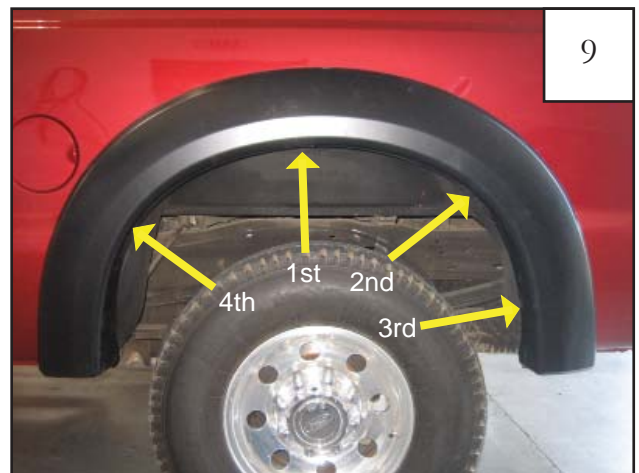

9

Position flare on fender and install screws through holes in flare and into clips with a #2 Phillips screwdriver in order shown. NOTE: If given order is not used, part is more difficult to install.




Reinstall bolt removed in Step 4 with a 10 mm socket.



Completed rear flare installation.

Edge Trim Tool Procedures:

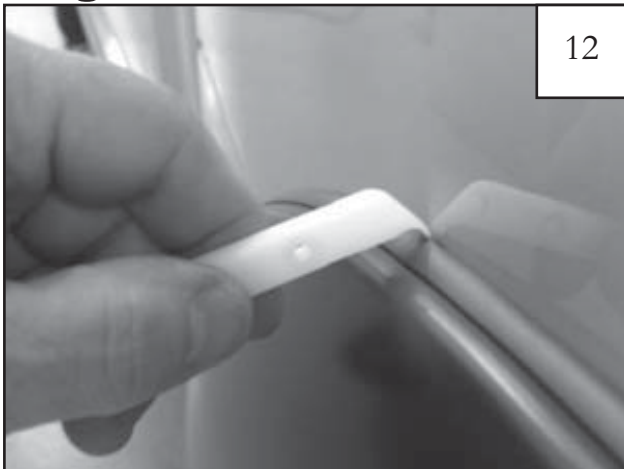

Using supplied Edge Trim Tool, seat edge trim against vehicle by hooking curved end under edge trim at one end of flare. Next, slide around outer edge of flare to the other end.



Using flat end of supplied Edge Trim Tool, seat edge trim against flare by inserting straight end between edge trim and flare at one end. Next, slide around entire edge to the other end.