

## STEP 1 – PRIOR TO INSTALLATION

- A) Bushwacker only approves installing the flares according to these written instructions with the hardware provided. WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B) Fit:** Verify the fit of the flares to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting:** (Optional) if paint is desired it must be done prior to installing flares on vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for ABS plastic as per your paint system manufacturer's recommendations is required. Paint flares using a high quality enamel, or polyurethane automotive paint. If painting edge trim (not recommended), use a flex additive.
- D) Performance:** Using larger Tires may increase the area required to turn the vehicle. Some Tire/Rim combinations may require lowering bump stops and or installing steering stops to prevent tire from contacting flare.
- E) Exhaust System:** Modifications may be necessary to maintain a minimum 4" clearance between flares and exhaust pipes. (Exhaust gases should not vent directly onto flares)
- F) Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint **BEFORE** installing flares. Spray inner fender wells with undercoating **AFTER** flare attachments have been completed.
- G) Decals:** Flares may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of flares.

# Chevrolet "OE" Style<sup>®</sup> Fender Flares Set of 4

Set Part #40933-02

Rev-3 9/6/2013

For complete fitment info visit : [www.bushwacker.com](http://www.bushwacker.com)

## TOOLS FOR EASY INSTALLATION:

- 7mm Socket
- Flathead Screwdriver

## LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.

## Included in Hardware Kit:



ET1-0002,  
Edge Trim Tool,

1 pc



GP1-0005,  
Large Wiper Style  
Edge Trim,  
348 inches



RV1-P006,  
8 x 20mm Black  
Nylon Retainer,

8 pcs

## STEP 2 - EDGE TRIM INSTALLATION

- Peel two to three inches of red vinyl backing away from Edge Trim (GP1-0005) tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle).
- Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare.



## Front Flare Installation Procedures (Driver's Side):




Using a 9/32" socket, remove two factory screws. Retain screws for later use.



Holding flare in position on fender, install two supplied plastic Retainers (RV1-P006). See Step 3 for locations.



Retainer locations.

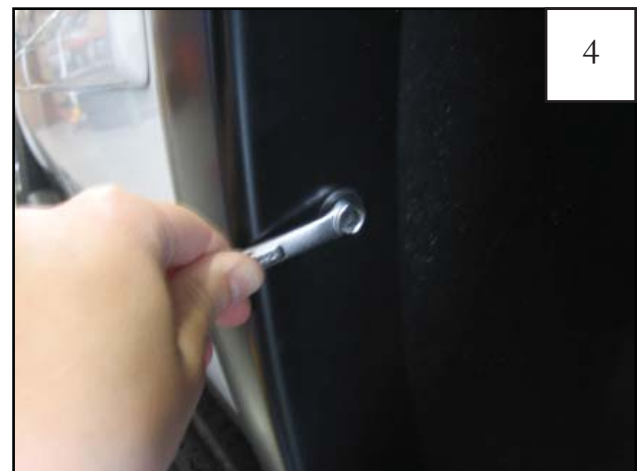

Reinstall factory screws removed in Step 1.



5


Using hole located in forward portion of flare as a guide, drill through the splash shield with a 5/16" bit. Holes in flare and splash shield should align with factory hole located in fender.



6

Install a supplied Retainer (RV1-P006) through hole drill in Step 5. Repeat Steps 1 - 6 for Passenger side installation.

## Rear Flare Installation Procedures (Driver's Side):

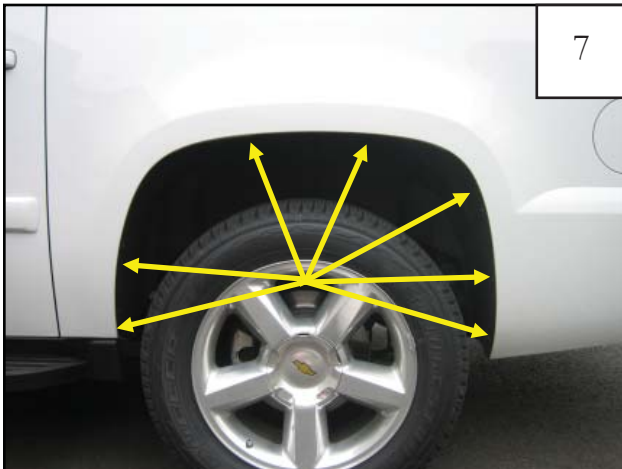

7


Using a 7mm socket, remove the seven factory screws. Retain these screws for future use.



8

Holding flare in position on fender, reinstall six of the seven screws removed in Step 7. Repeat Steps 7 & 8 for Passenger side installation.

## Edge Trim Tool Procedures:

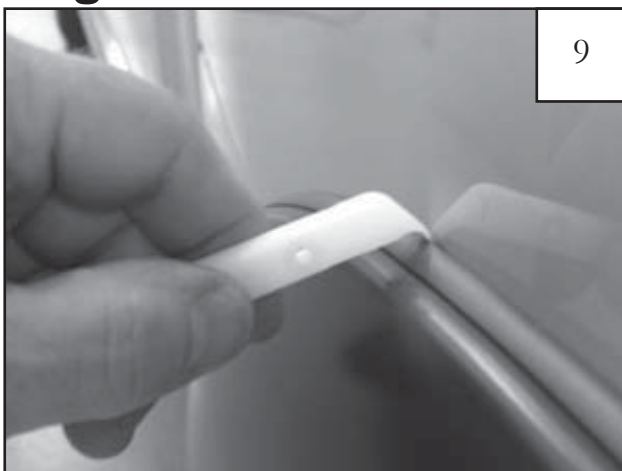

9

Using supplied Edge Trim Tool (ET1-0002), seat edge trim against vehicle by hooking curved end under edge trim at one end of flare. Next, slide around outer edge of flare to the other end.



10

Using flat end of supplied Edge Trim Tool (ET1-0002), seat edge trim against flare by inserting straight end between edge trim and flare at one end. Next, slide around entire edge to the other end.