



2011-2014 HD Chevy 2500 20" LED LIGHT MOUNT

Thank you for choosing Rough Country for all your off road needs.

▲ NOTICE Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

▲ NOTICE Only fits **Chevrolet 2500 2011-2014** models.

Tools Needed:

13mm Wrench
Flathead Screwdriver
Needle Nose Pliers
1/2" Wrench/ Socket




Kit Contents:

2-Rough Country LED Light Brackets
1-70522BAG1 containing:


- 4- 5/16 x 1" bolts
- 8- 5/16 Flat Washers
- 4- 5/16 Lock Washers
- 4- 5/16 Nuts

INSTALLATION INSTRUCTIONS

1. Using a 13mm wrench remove the four factory bolts securing bumper to the frame. **See Photo 1.**
2. Remove factory clip nuts. **See Photo 2.**

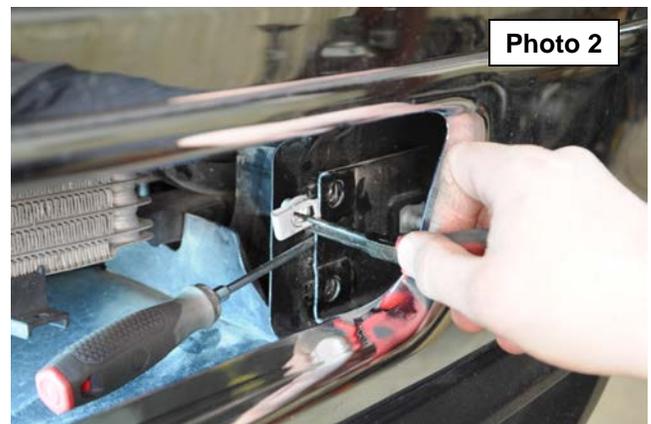

3. Place bracket behind frame horn. (with the light tab to the inside). **See Photos 3 & 4.**

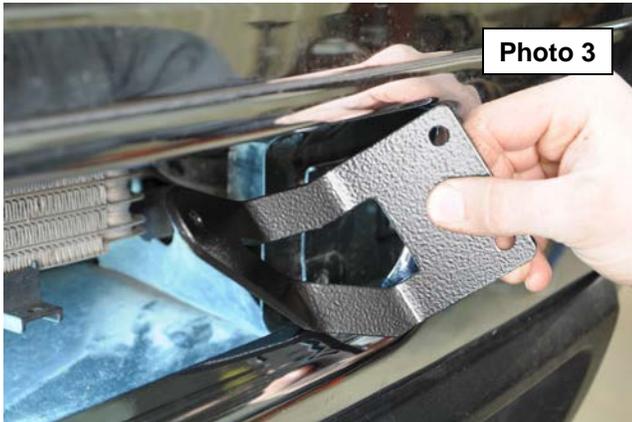

4. Repeat process for other side.
5. Install 20" light bar between the brackets and tighten with the supplied bolt that came with the light. **See Photo 5&6.**
6. Wire the light with the supplied light instruction sheet.



Thank You for choosing Rough Country for your lighting needs!!!



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.