


GM Truck/SUV SLP Hood Scoop Installation

IMPORTANT: This hood scoop is manufactured with two attachment pins located on the front of the scoop. Using these pins with the supplied speed nuts is optional for most applications, but is recommended in warm temperature climates. Extreme heat can cause the tape to soften. If you choose not to use the attachment pins, simply cut them off at the base as close as possible to the tape surface.

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING HOOD SCOOP

- **WHEN INSTALLING HOOD SCOOP. ALWAYS INSTALL FROM CENTER OUTWARD. MAKING SURE TO PUSH HARD IN THE CENTER FRONT PART OF THE SCOOP/GRILLE ASSEMBLY TO ALLOW TAPE TO ADHERE TO HOOD SURFACE. BY STARTING IN THE CENTER OUTWARD THIS ALLOWS THE SCOOP TO FOLLOW THE CONTOUR OF THE HOOD AND ALLOWS ALL SURFACES TO ADHERE CORRECTLY FROM CENTER OUTWARD TOWARD THE FENDERS. ALSO MAKING SURE ALL SURFACES HAVE ADHESION PROMOTER PRIOR TO HOOD SCOOP PLACEMENT.**
- **Thoroughly clean tape surface on the underside of the hood scoop and the surface area of the hood where the tape on the scoop will be applied with rubbing alcohol or wax and grease remove. SCUFFING THE TAPE SURFACE OF THE SCOOP WITH ANY KIND OF ABRASIVE MATERIAL IS NOT NECESSARY. SEE PAGE 3 FOR TAPE PLACEMENT**

1. Locate the hood scoop by measuring to find the center of the hood and using the supplied dimensions in the photo below.

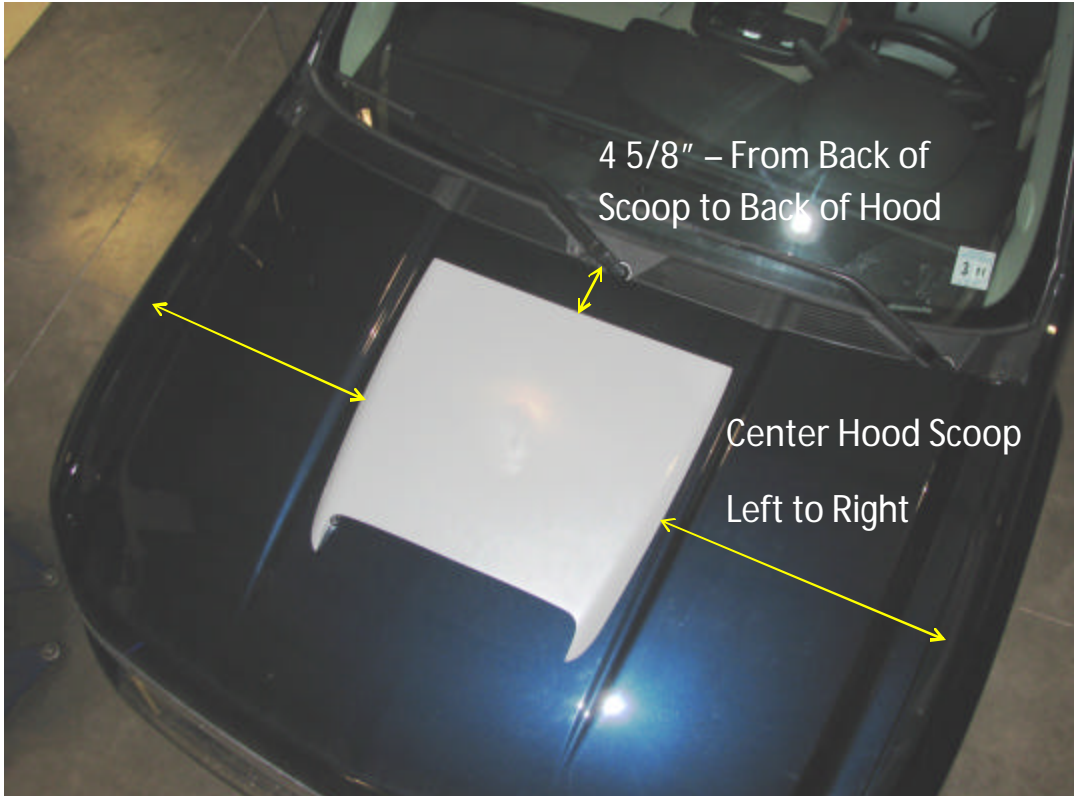

900 SERIES C/K Truck/SUV Hood Scoop Placement

2. After the scoop is painted, attach unpainted grille to scoop by removing the protective backing from the tape and pressing into place. See page 3 for tape placement and scoop placement.
3. After attaching grille to scoop, find the **center of the scoop** by measuring it's width along the bottom of grille. (fig. C) Mark center point on **face of grille** and **rear of scoop** with a **grease pencil**.
4. Using the supplied **adhesion promoter pad**, **wipe the areas of the scoop and hood where the tape will make contact**. Allow adhesion promoter to dry on all surfaces before applying tape.
5. Before applying tape, cut it to the correct lengths as shown in fig. C on page 3 of this installation sheet.
6. Remove tape backing from one side of the tape and apply to bottom edges of hood scoop as shown in fig. C on page 3.
7. **TEST FIT HOOD SCOOP ON HOOD WITH TAPE INSTALLED ON SCOOP BEFORE REMOVING RED TAPE BACKING.**
8. To find the best fit, move the scoop back and forth on the hood until there are minimal gaps between the bottom of the scoop and the top of the hood.
9. Once you're satisfied with the hood scoop location, outline the entire scoop directly onto the hood with a grease pencil
10. With the grille attached to the scoop, remove all the red backing to expose tape. Carefully align scoop with the grease pencil outline and press firmly in place onto the hood **FROM CENTER OUTWARDS** (apply at least 35lbs. of pressure to ensure proper adhesion). Remove grease pencil outlines by using wax and grease remover.

IMPORTANT NOTES:

HOOD, SCOOP, AND TAPE MUST BE 70° OR WARMER BEFORE APPLYING TAPE

*SLP suggests contacting your local paint shop for hood scoop painting recommendations. Grille does not require painting.

The roll of .090" thick double sided tape included with the hood scoop is 72" in length. Total length of .090" tape required to install the scoop is 49.75".

The roll of .060" thick double sided tape included with the hood scoop is 24" in length. Total length of .060" tape required to install the scoop is 24".

The roll of .030" thick double sided tape included with the hood scoop is 24" in length. Total length of .030" tape required to install the scoop is 19".

