

### STEP 1 – PRIOR TO INSTALLATION

- A) Bushwacker only** approves installing the flares according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B) Fit:** Verify the fit of the flares to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting:** (Optional) if paint is desired it must be done prior to installing flares on vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for ABS plastic as per your paint system manufacturer's recommendations is required. Paint flares using a high quality enamel, or polyurethane automotive paint. If painting edge trim (not recommended), use a flex additive.
- D) Performance:** Using larger Tires may increase the area required to turn the vehicle. Some Tire/Rim combinations may require lowering bump stops and or installing steering stops to prevent tire from contacting flare.
- E) Exhaust System:** Modifications may be necessary to maintain a minimum 4" clearance between flares and exhaust pipes. (Exhaust gases should not vent directly onto flares)
- F) Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint **BEFORE** installing flares. Spray inner fender wells with undercoating **AFTER** flare attachments have been completed.
- G) Decals:** Flares may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of flares.

## Jeep® Flat Style Fender Flares Rear Pair

Rear Part #10056-07

Rev-6 10/25/2013

For complete fitment info visit : [www.bushwacker.com](http://www.bushwacker.com)










### TOOLS FOR EASY INSTALLATION:

- #2 Phillips Drive Bit
- #2 Phillips Screwdriver
- 5/16" Wrench
- Awl
- Soft Wiping Cloth
- Pry Bar/Claw Hammer

### LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.

## Included in Hardware Kit:

- |  |  |  |  |   |   |   |
|--|--|--|--|---|---|---|
| <p>1. </p> <p>CL1-0022,<br/>#10 "U" Clip,</p> <p>12 pcs</p>                 | <p>2. </p> <p>SW1-0056,<br/>#8 x 3/4"<br/>PH Screw,</p> <p>12 pcs</p> | <p>3. </p> <p>SP1-0011,<br/>1/4" x 5/8" x .187"<br/>Neo Black Spacer,</p> <p>12 pcs</p> | <p>4. </p> <p>SW1-0053,<br/>M5-.8 x 25mm<br/>Philps Mach Screw,</p> <p>12 pcs</p> | <p>5. </p> <p>ET1-0002,<br/>Edge Trim Tool,</p> <p>1 pc</p> | <p>6. </p> <p>GP1-0006,<br/>Wiper Style (2-<br/>tape) Edge Trim,</p> <p>125 inches</p> | <p>7. </p> <p>NU1-0010,<br/>M5 x.8 Serrated<br/>Flange Hex Nut,</p> <p>8 pcs</p> |
| <p>8. </p> <p>WA1-0003,<br/>#10 SAE<br/>1/2" Flat Washer,</p> <p>12 pcs</p> | <p>9. </p> <p>AD1-0008,<br/>ALCOHOL PREP<br/>PAD,</p> <p>1 pc</p>     |  |  |   |   |   |

## STEP 2 - EDGE TRIM INSTALLATION

The edge trim for this application is double-tape edge trim so special care needs to be taken while installing. There is red vinyl backing on the inside of the edge trim where it will adhere to the flare and red vinyl backing on the outside where it will adhere to the vehicle. The following steps only concern where the edge trim will adhere to the flare. Additional edge trim installation instructions are included during the rest of the installation process.

A. Peel two to three inches of red vinyl backing away from edge trim tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle). Stop at tube feature of flare.

**Picture 1 for tube feature reference**

B. Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare. **See Picture 2 for additional edge trim orientation**




## Rear Flare Installation Procedures (Driver's Side):



Using a pry bar or claw hammer, remove the christmas tree fasteners then remove/loosen the rear wheel well skirting. Save fasteners for reinstallation.




Remove the factory installed fender flare screws with a 5/16" socket wrench. (8 locations)

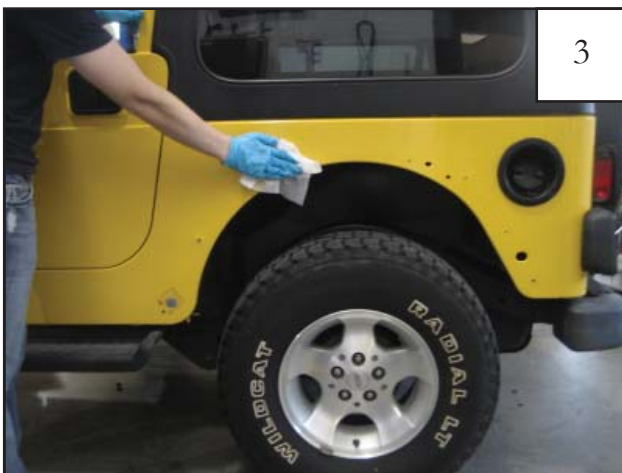

Thoroughly clean the exposed metal fender with a damp cloth then dry.



Locate the new flat flare rear inner pieces. The driver side rear inner pieces are marked D3, D4, and D5. (Passenger side pieces are marked P3, P4 and P5)

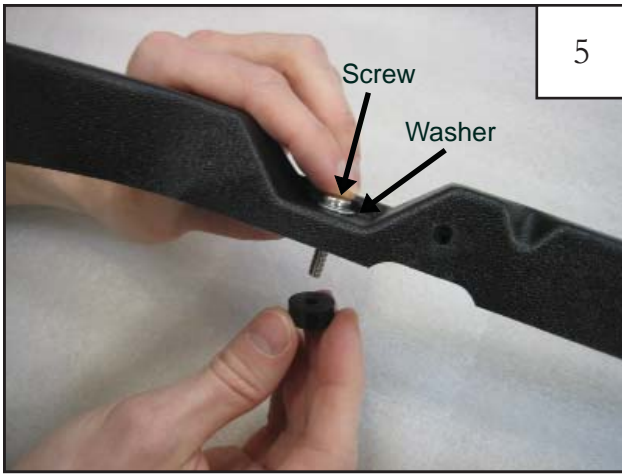


Put an M5-.8 machine screw and washer through the top holes of the inner pieces and secure with a 1/4" rubber spacer on the underside of the inner piece.



Push the rubber spacer and M5-.8 machine screw together until they are both tight against the inner piece. Spacer has been lightened in picture for visibility.




Install a speed clip at each clip location on the inner pieces, centering them on the predrilled holes. (6 locations) *NOTE: Clips slide out of place easily. Try pinching the metal tightly onto the inner piece with pliers.*

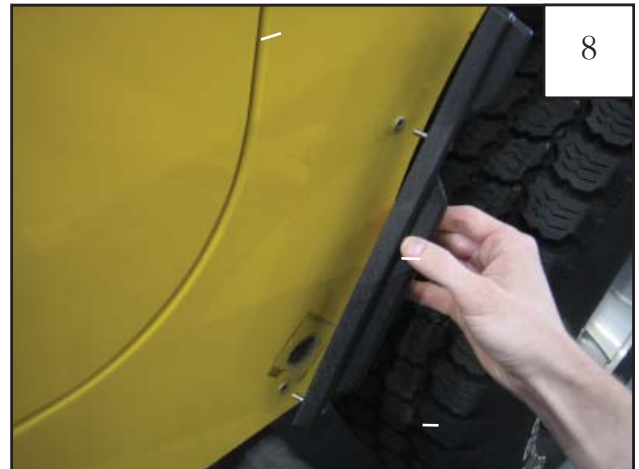

Secure inner piece D3 to the sheet metal using the following **2 STEPS: Step 1:** Line up the M5-.8 machine screws with the factory hole locations.



**Step 2:** While holding the inner piece in place, use a #2 Phillips bit to tighten the M5-.8 machine screws into the factory mounted nuts.

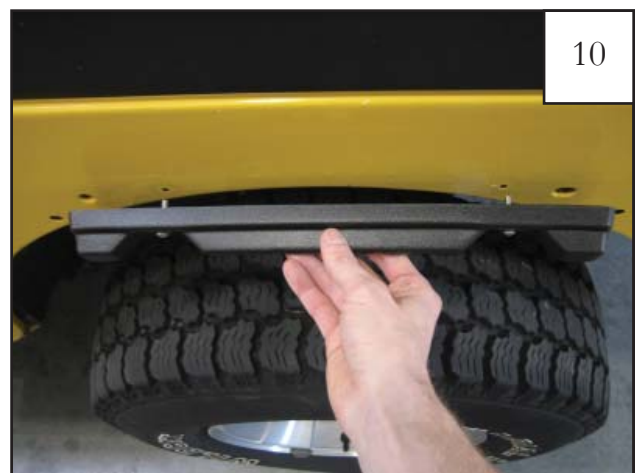


Secure inner piece D4 (and P4 for passenger side installation) to the sheet metal using the following **3 STEPS: Step 1:** Line up the M5-.8 machine screws with the factory hole locations and push them into place.



11

**Step 2:** Attach flange nuts to the threads on the M5-.8 machine screws and hand tighten.

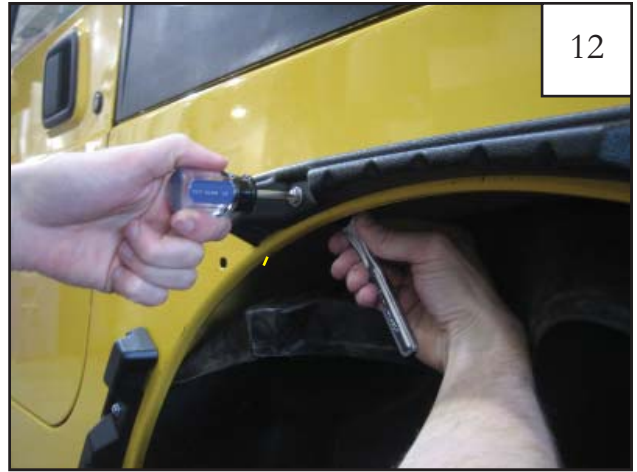


12

**Step 3:** Use a 5/16" wrench for the flange nuts and a #2 Phillips bit for the machine screws and fully tighten inner piece to the fender.



13

Secure inner piece D5 (and P5 for passenger side installation) to the sheet metal using the following 4 **STEPS:** **Step 1:** Line up the M5-.8 machine screws with the factory hole locations.

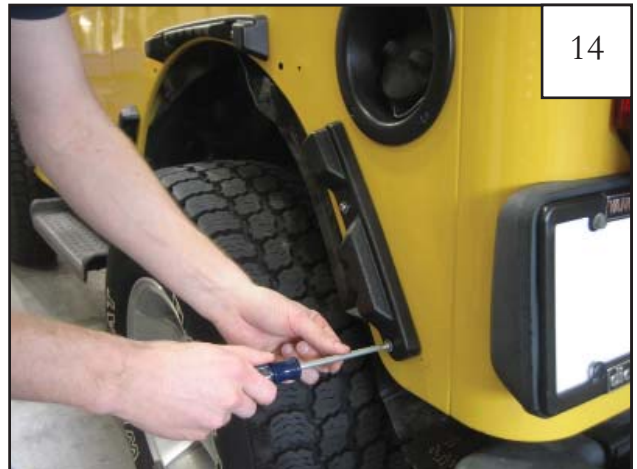


14

**Step 2:** While holding the inner piece in place, use a #2 Phillips bit to start the M5-.8 machine screw into the factory mounted nut. Do not tighten.



15

**Step 3:** Attach a flange nut to the threads on the M5-.8 machine screw and hand tighten.

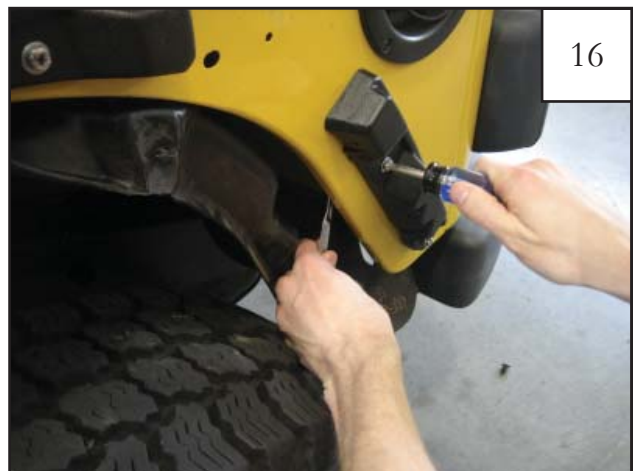


16

**Step 4:** Use a 5/16" wrench for the flange nut and a #2 Phillips bit for the M5-.8 machine screws and fully tighten inner piece to the fender.



Reinstall the rear wheel well skirt using the christmas tree fasteners removed and saved in Step 1.

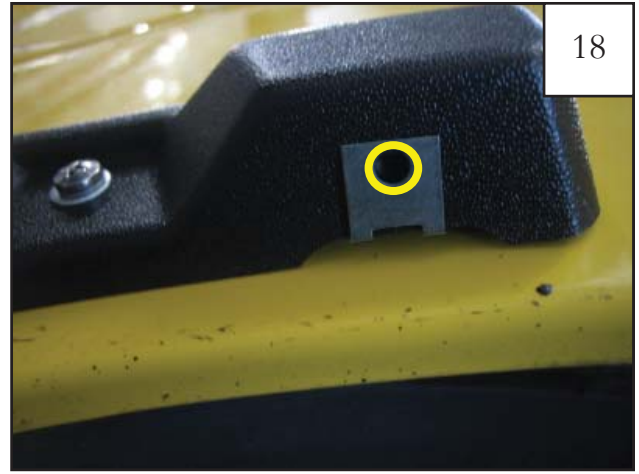

Before installing the outer flare, make sure that the speed clips on the inner pieces are centered over the predrilled holes.




Use one supplied alcohol prep pad to clean the *sheet metal* above each inner piece in preparation to tape the edge trim to the sheet metal. *This must be done for proper flare installation.*




Using a hammer and an angle grinder, flatten tabs then grind down any sharp edges.



Place the outer flare over the inner pieces and push until snug against the vehicle surface.

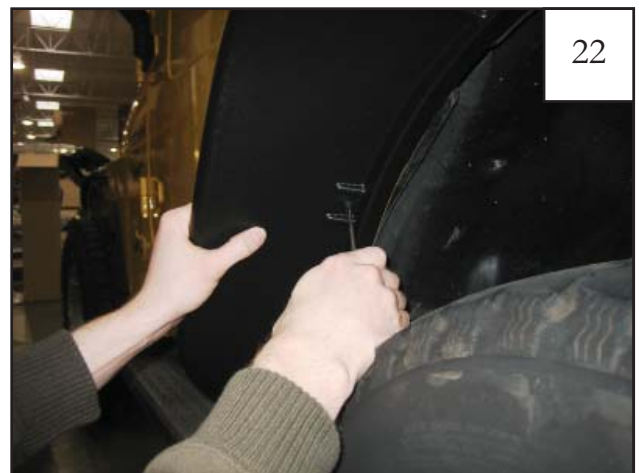


Use an Awl (or another pointed tool) to line up the speed clips with the outer flare holes (6 locations). If needed, use a flashlight to better locate the speed clips.

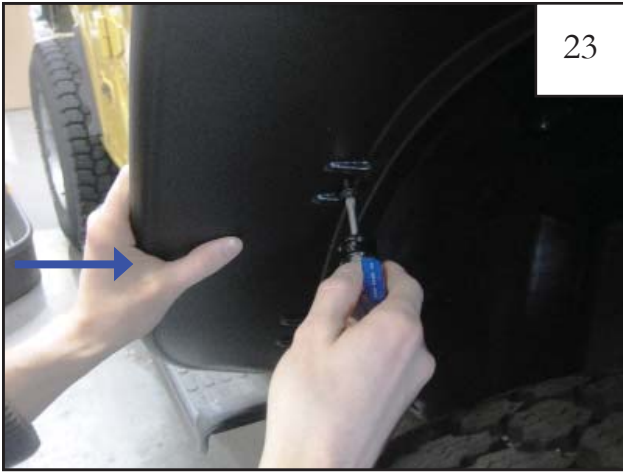

23

Hold flare in place on fender and start a #8 pan head screw into each hole location and through the speed clip on inner structure (6 locations). Do not tighten.

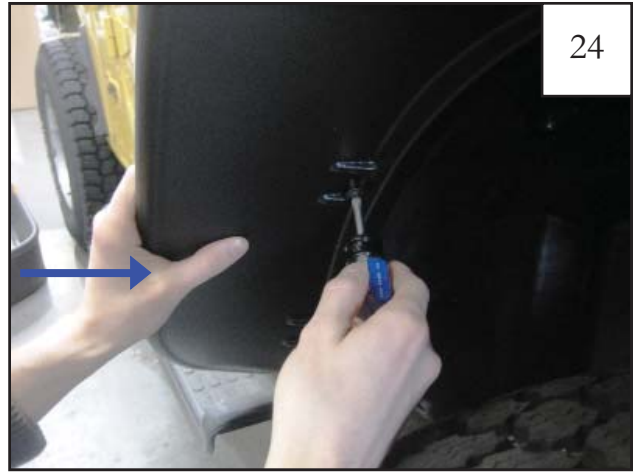


24

Tighten the #8 pan head screws by *firmly* pressing the flare toward the vehicle while tightening the screws.



25

Peel outer tape liner from the double-taped edge trim. Push down *lightly* on the fender flare to create a small gap between the sheet metal and the edge trim. This makes it easier to pull the red liner.

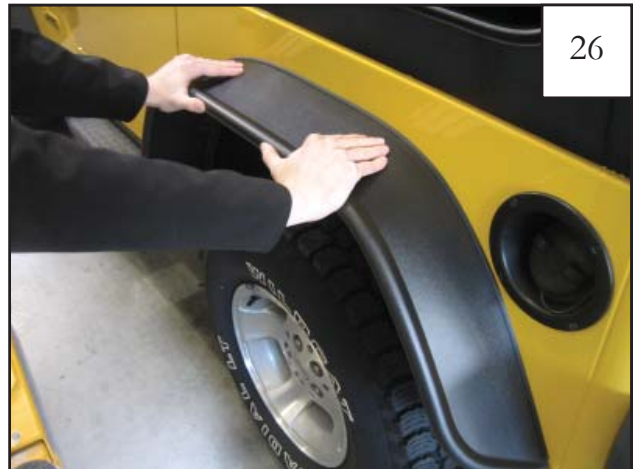

26

*Firmly* press the flare toward the vehicle for 10 seconds to adhere the tape to the vehicle surface. Repeat this process moving along the entire length of the flare. The vehicle surface temperature must be between 65-110° F for proper adhesion. Allow 24 hours for full adhesion.



27

Starting at one end, use the flat edge of the supplied edge trim tool to further adhere the edge trim to the vehicle surface. Slide the tool along the edge trim while pressing it in toward the vehicle surface.



28

Use the hooked end of the edge trim tool to check for full adhesion. Do this by sliding it along the top of the edge trim to visually verify that the tape is adhered to the vehicle surface. Repeat step 63 if the tape is not fully adhered to the vehicle surface.



Completed rear driver's side flare installation.